



## **ASSEMBLY · MAGAZINE**







## **MAGAZINE CALIBRATION**



C F

THE CALIBRATION IS ONLY REQUIRED IF COUNT SEQUENCE IS INCORRECT.

#### **1. ENTERING IN CALIBRATION MODE**

Pushing counter button(left/right) and reset button(inside grip).

### 2. MAGAZINE

Load 15 cartridges in the magazine.

### 3. GUN

001274

Load a cartridge in the chamber.

#### **4. FIRE THE GUN**

Shoot holding check button, keeping an interval of 2 seconds between shots.

#### **5. EXITING CALIBRATION MODE**

Automatically after last shot. After 15 seconds timeout counting from step 1. By pressing counter button until display shows 0.

\*The device only works with original Beretta magazine\*\*The device does NOT detect round housed in the chamber. Important: Always observe the basic safety rules when handling firearms.

FC

www.radetec.com · info@radetec.com

RADETEC 🗲



# **DISPLAY ACTIVATION EVENTS**

#### ACTIVATION

- Firing a gun.
- Pressing the check button.
- Pressing counter buttons to show the total number of shots fired.



#### **COUNTER BUTTON**

Press these buttons on both sides of the grip to show the accumulated number of shots fired.



Push the check button to know the number\*\* of cartridges in the magazine.

Display intensity is automatically adjusted depending on ambient light.

001274

DISPLAY EXAMPLE



Reset shot counter: push reset button.

RADETEC 🗲

\*The device only works with original Beretta magazine.\*\*The device does NOT detect round housed in the chamber. Important: Always observe the basic safety rules when handling firearms.

(E F© 🕱

www.radetec.com · info@radetec.com