 


# AMMOCONTROL

LED Advisor  
for GLOCK 17 Gen4



## PACKAGE CONTENTS



CR 1632  
Battery x1



Follower x2




AMMOCONTROL x1

## ASSEMBLY


### Insert the battery

Be careful with the opening angle.

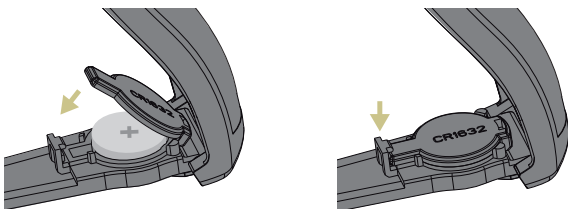


If when installing the battery the LED light is blinking red, you should start the process again.

### Insert the battery module in the frame, and set the backstrap in place

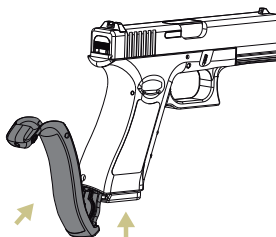


### Fix the AMMOCONTROL backstrap with the pin\*

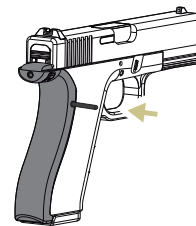


## FOLLOWER INSTALLATION


### Disassemble the magazine\*\*

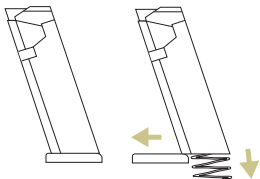


### Remove the original follower

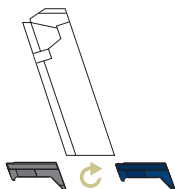

### Replace it with the AMMOCONTROL follower

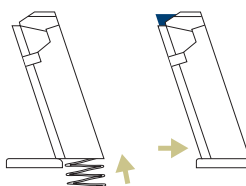

### The system is ready to use

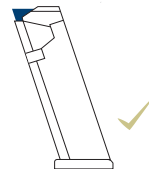

## OPERATION · LED ACTIVATION EVENTS



### SHOOTING

NO LIGHT 4 rounds or more  
RED LIGHT 3 rounds or less\*\*\*

### PRESSING THE CHECK BUTTON

GREEN LIGHT 4 rounds or more  
RED LIGHT 3 rounds or less  
BLUE LIGHT Low battery  
PURPLE LIGHT No mag

### Other events · BLIND MODE

• In blind mode, remaining magazine round information is only accessible by pressing either of the buttons and is not visible during shooting.

BLINKING AMBER LIGHT Enter "blind" mode  
AMBER LIGHT Back to "normal" mode

- The device enters "blind" mode by pressing either button for 3 or more seconds.
- The device goes back to the "Normal" mode by pressing either button for 3 or more seconds.

Always observe the basic safety rules when handling firearms.\*NOT INCLUDED(Use original)\*\*The device only works with original GLOCK mag.\*\*The device does NOT detect round housed in the chamber.