



# DIGITAL COUNTER

1911

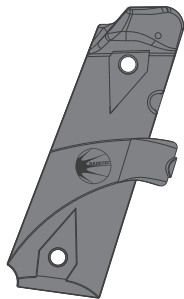

## PACKAGE CONTENTS

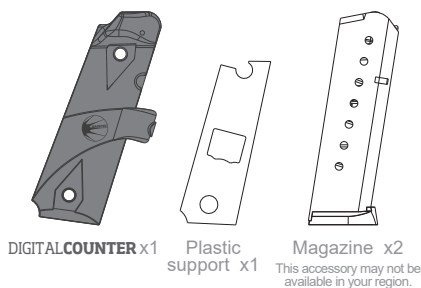


## TOOLS

\*not included




## ASSEMBLY · GUN

### Disassemble the original grips

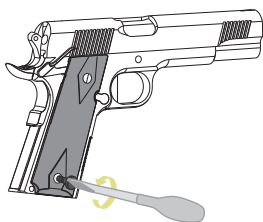


### Assemble the battery(LeftGrip)

Low battery: A point in Display Indicator.

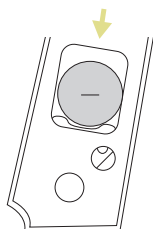


### Assemble plastic support

Put the plastic support between the gun and the left grip.

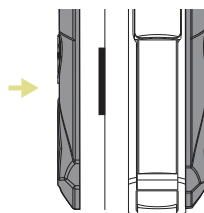

### Assemble DIGITAL.COUNTER grips using original screws & washers

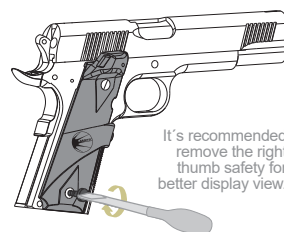


#### WARNING

Always make sure your firearm is unloaded, no rounds in the chamber and pointed in a safe direction before you disassemble and work on it.

#### WARNING

This device DOES NOT count rounds in the chamber and DOES NOT show if there is a round in the chamber. Always make sure your firearm is unloaded and with no round in the chamber.


## ASSEMBLY · MAGAZINE Use only ACT-MAG original magazines.

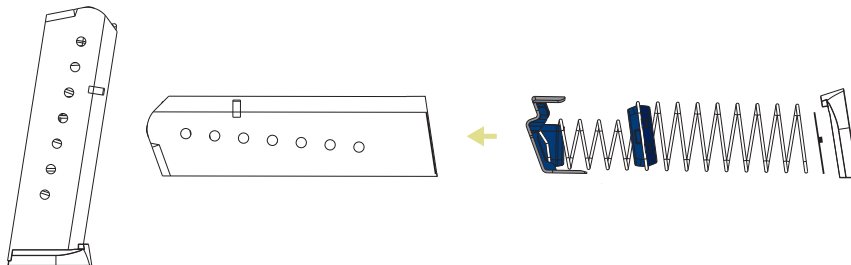

Position of the blue parts on the spring.

Don't remove blue parts. They are necessary for correct device operation.

## MAGAZINE CALIBRATION Use only ACT-MAG original magazines.

 

CALIBRATION IS ONLY REQUIRED IF COUNT SEQUENCE IS INCORRECT.

### 1. ENTERING CALIBRATION MODE

Push total shot counter button (left) and reset button (inside grip).

### 2. MAGAZINE

Load 7 cartridges in the magazine.

### 3. GUN

Load a cartridge in the chamber.

### 4. FIRE THE GUN

Shoot holding check button, keeping an interval of 2 seconds between shots.

### 5. EXITING CALIBRATION MODE

- Automatically after last shot.
- After 15 seconds timeout counting from step 1.
- By pressing counter button until display shows 0.

## KNOW YOUR DIGITAL COUNTER


### WARNING

Always make sure your firearm is unloaded, no rounds in the chamber and pointed in a safe direction before you disassemble and work on it.

TOTAL SHOT COUNTER  
BUTTON (LEFT)

DISPLAY INDICATOR

RESET BUTTON  
(INSIDE GRIP)

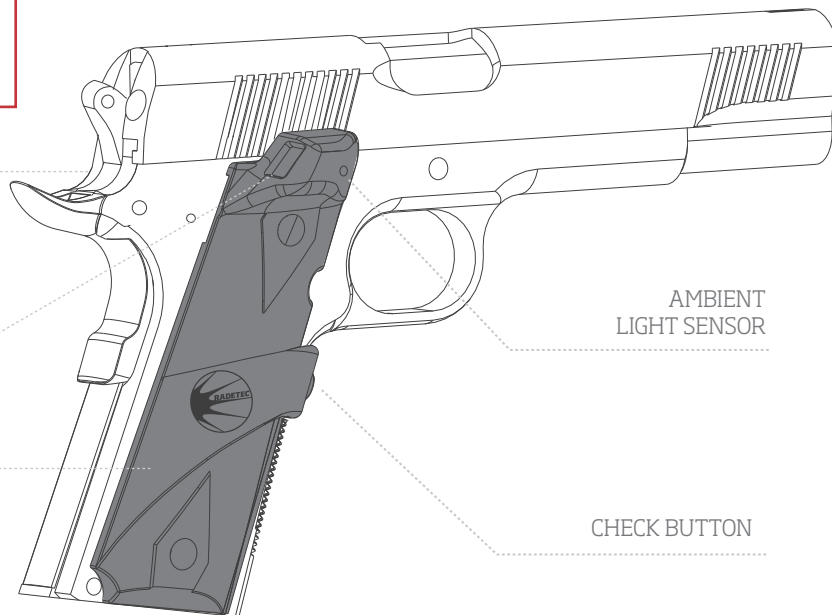


AMBIENT  
LIGHT SENSOR

CHECK BUTTON

## DISPLAY ACTIVATION EVENTS


### ACTIVATION

- Firing the gun.
- Pressing the check button.
- Pressing counter button to show the total number of shots fired.

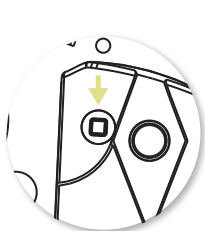

### COUNTER BUTTON

Press this button on left side of the grip to show the accumulated number of shots fired.

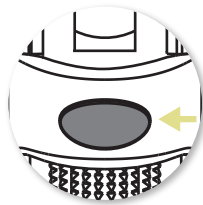


Push the check button to know the number\* of cartridges in the magazine\*\*.

Display intensity is automatically adjusted depending on ambient light.

### DISPLAY EXAMPLE

### WARNING

This device DOES NOT count rounds in the chamber and DOES NOT show if there is a round in the chamber. Always make sure your firearm is unloaded and with no round in the chamber.

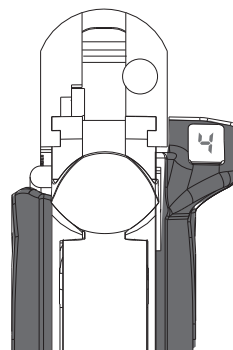

→ 42 SHOTS



Reset shot counter: push reset button.