


# LED ADVISOR

GLOCK 17 / 22 / 31  
Gen.4 & Gen.5



## PACKAGE CONTENTS

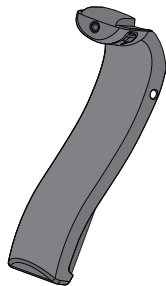

Follower x2



LEDADVISOR x1

## TOOLS

\*not included




CR 1632  
Battery x1

## ASSEMBLY

### WARNING


Always make sure your firearm is unloaded, no rounds in the chamber and pointed in a safe direction before you disassemble and work on it.

Insert the battery *Be careful with the opening angle.*

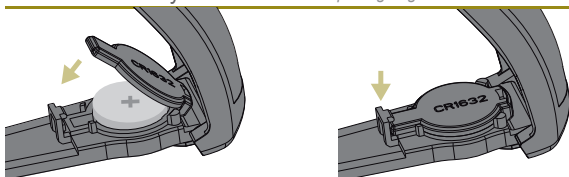


*If after installing the battery the LED light is blinking red, you should start the process again.*

Insert the battery module in the frame, and set the backstrap in place

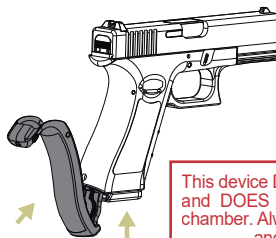

Fix the **LEDADVISOR** backstrap with the pin\*

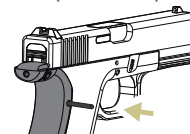


*Pin not included, use original pin.*

### WARNING


This device **DOES NOT** count rounds in the chamber and **DOES NOT** show if there is a round in the chamber. Always make sure your firearm is unloaded and with no round in the chamber.

## FOLLOWER INSTALLATION *Use only GLOCK original magazines.*


Disassemble the magazine\*\*

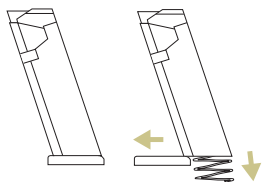


Remove the original follower

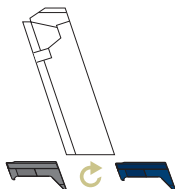

Replace it with the **LEDADVISOR** follower

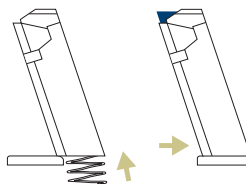

The system is ready to use

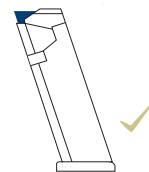

## OPERATION · LED ACTIVATION EVENTS



### SHOOTING

**NO LIGHT** 4 rounds or more  
**RED LIGHT** 3 rounds or less\*\*\*

### PRESSING THE CHECK BUTTON

**GREEN LIGHT** 4 rounds or more  
**RED LIGHT** 3 rounds or less  
**BLUE LIGHT** Low battery  
**PURPLE LIGHT** No mag

### Other events · BLIND MODE

• In blind mode, remaining magazine round information is only accessible by pressing either of the buttons and is not visible during shooting.

**BLINKING AMBER LIGHT** Enter "blind" mode  
**AMBER LIGHT** Back to "normal" mode

- The device enters "blind" mode by pressing either button for 3 or more seconds.
- The device goes back to the "Normal" mode by pressing either button for 3 or more seconds.