



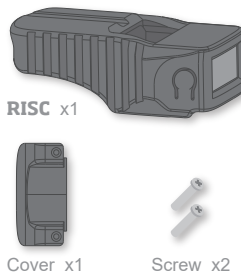

**PACKAGE CONTENT**

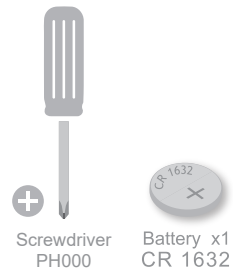


**TOOLS**  
\*not included



**1.0 ASSEMBLY**


**Insert the battery**

Negative polarity on the screen side.

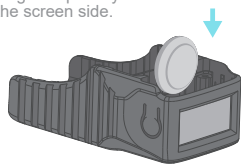


**WARNING**  
Always make sure your firearm is unloaded, no rounds in the chamber and pointed in a safe direction before you disassemble and work on it.

**Assemble the cover with the screws**

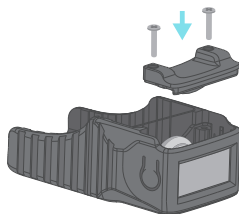


**Fix the RISC on the slide**

Be careful with the magnet when you fix the RISC. Compatible with the OEM rear sight.

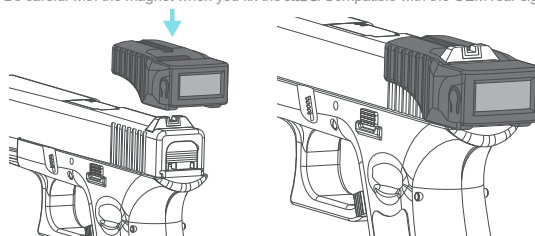


**WARNING**  
Always make sure your firearm is unloaded, no rounds in the chamber and pointed in a safe direction before you disassemble and work on it.

**2.0 KNOW YOUR RISC**

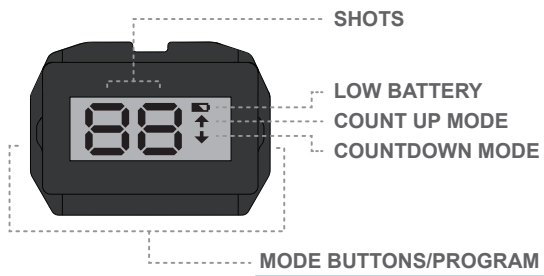


**BUTTONS CHANGE MODES**

Change the mode quickly and intuitively by pressing either button for 1,5 seconds.

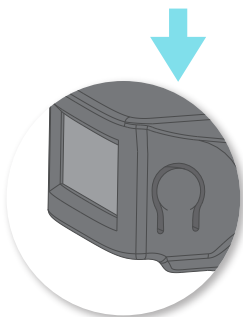

**3.0 SWITCH ON / OFF**

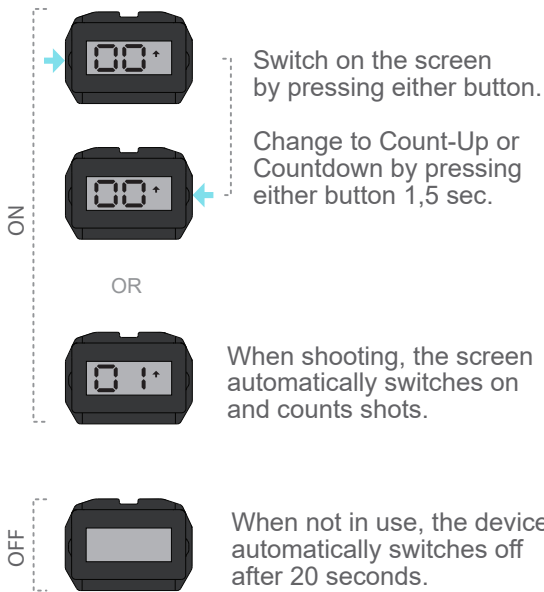

### 3.1 COUNT UP MODE

Number of shots increases automatically.

#### SELECT MODE

Press either button for 1,5 sec. until arrow points up.



#### WARNING

Always make sure your firearm is unloaded, no rounds in the chamber and pointed in a safe direction before you disassemble and work on it.

### 3.2 TOTAL SHOT COUNTER

Records total number of shots fired while device is installed.

 
Total Shot Counter mode can be only accessed when in Count Up mode.

#### SELECT MODE

Press both buttons for 3 seconds.



#### AUTOMATIC DISPLAY SEQUENCE



1710 Shots

NOTE. To reset Count-Up or Countdown counters press either button for 1 sec. twice.

### 3.3 COUNTDOWN MODE

Number of shots decreases automatically.

#### SELECT MODE

Press either button for 1,5 sec. until arrow points down.



#### WARNING

This device DOES NOT count rounds in the chamber and DOES NOT show if there is a round in the chamber. Always make sure your firearm is unloaded and with no round in the chamber.

### 3.4 COUNTDOWN MODE : PROGRAMMING

Programming can only be accessed while in Countdown mode.

Enter the number of cartridges that you want to shoot and when shooting the numbers (LCD) will decrease.

#### SELECT MODE

Press both buttons for 3 seconds.



LEFT BUTTON  
subtracts shots.

RIGHT BUTTON  
adds shots.

## 4.0 FEATURES

**2 separate modes**  
Count up / Countdown

**Total Shot Counter**

**LCD Screen**  
Only visible to the shooter

**Interchangeable battery (CR1632)**  
Low battery indicator

**Ambidextrous**      **Battery life** 20.000 shots

**Weight** < 25 gr.      **Error rate** < 0.1%

**Operational range temperature** -20°C / 70°C

**Storage range temperature** -30°C / 80°C

**MIL-STD-810G METHOD 504.1**

**IP53**

**COMPATIBLE MODELS** Gen3 & Gen4 & Gen5

17/17L/19/22/23/24/25/26/27  
28/31/32/33/34/35/37/38/39

Other GLOCK models Gen3&4 could also be compatible.  
Stay tuned to our website for updates!